

75105652 Single Screen Holder
Version 1.1

BEFORE STARTING THE BUILD


The following are needed for assembly:

- A set of hex wrenches
- Tape measure/ruler

Read the manual first. All remarks are important and could help you avoid problems.



Use BOM (Bill of Material) to find the sizes and lengths of the parts.



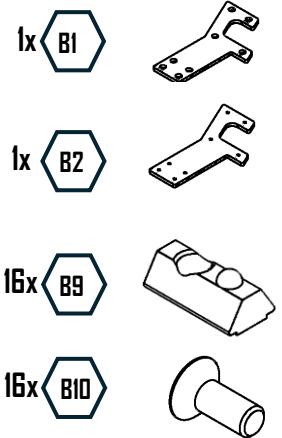


Prepare both monitor main brackets (left and right) with B10 M8x20 countersunk screws and B9 M8 T-nuts.

Only tighten them by one turn so that they can be slid into place in the next step.

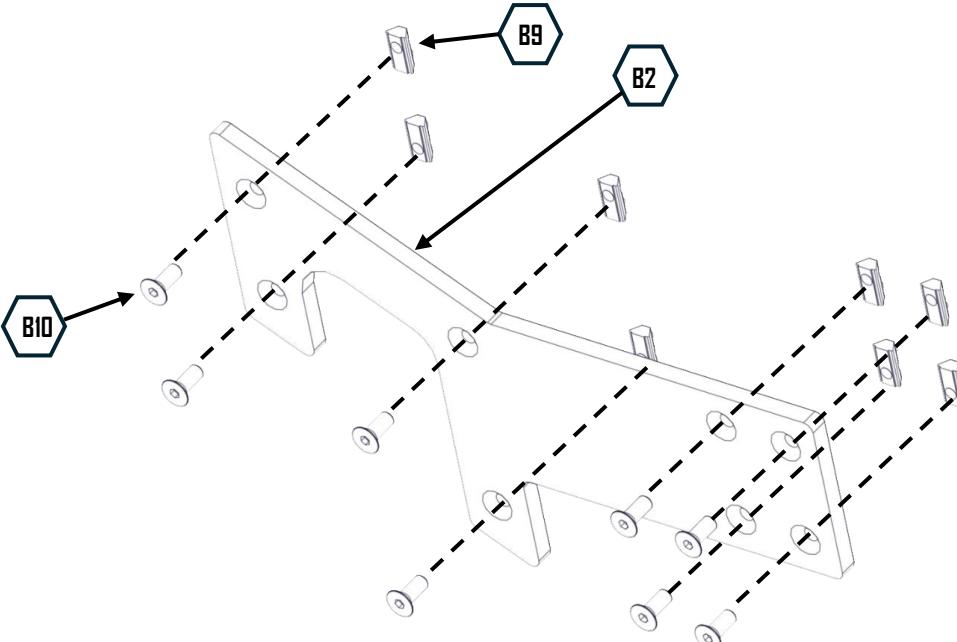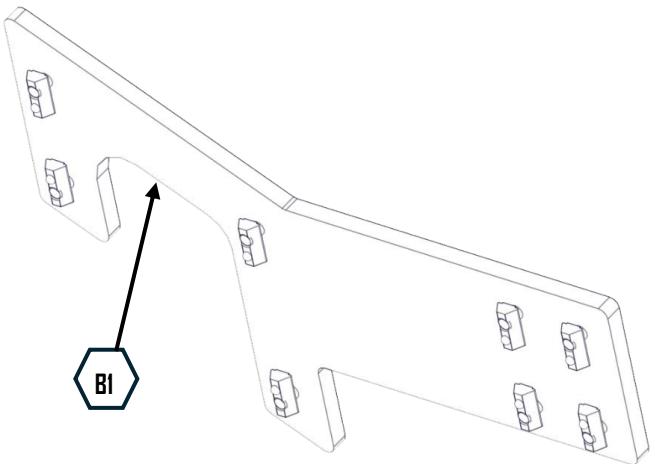

Slide the left and right units into the base frame (the picture shows the upper end cap, which must be removed to do this).


Place them both in the desired position (on both sides at the same height) and tighten all the screws.

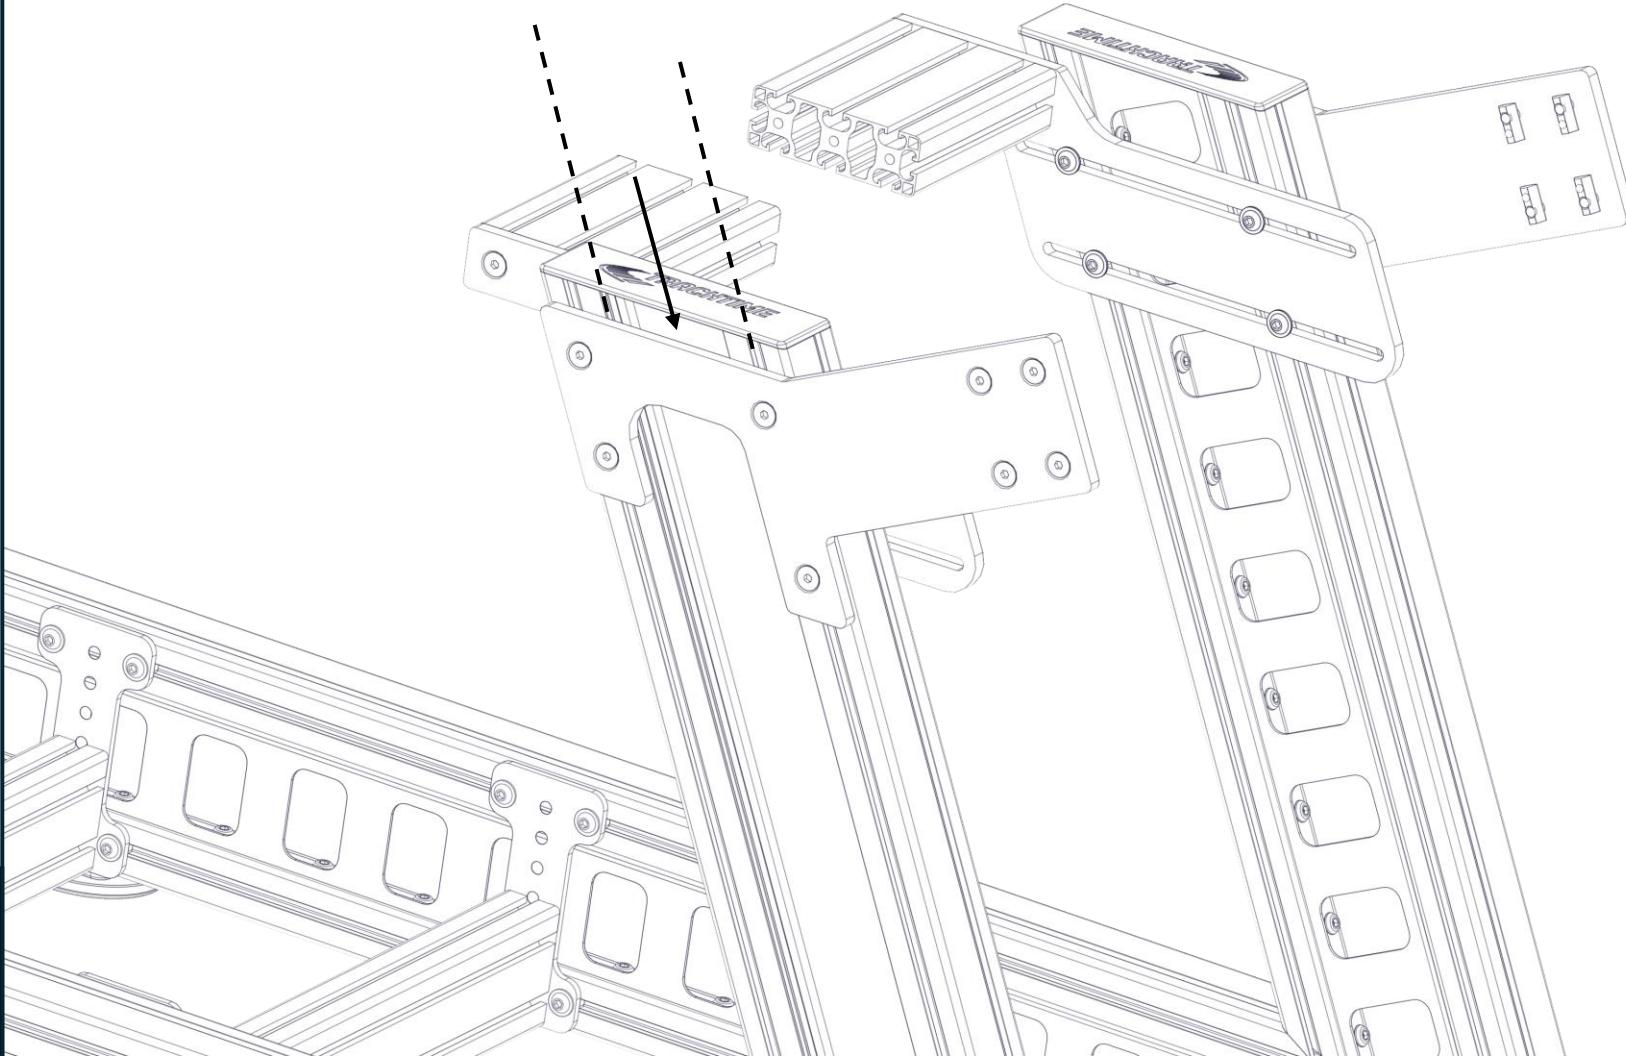

2x B4



SINGLE SCREEN UNIT

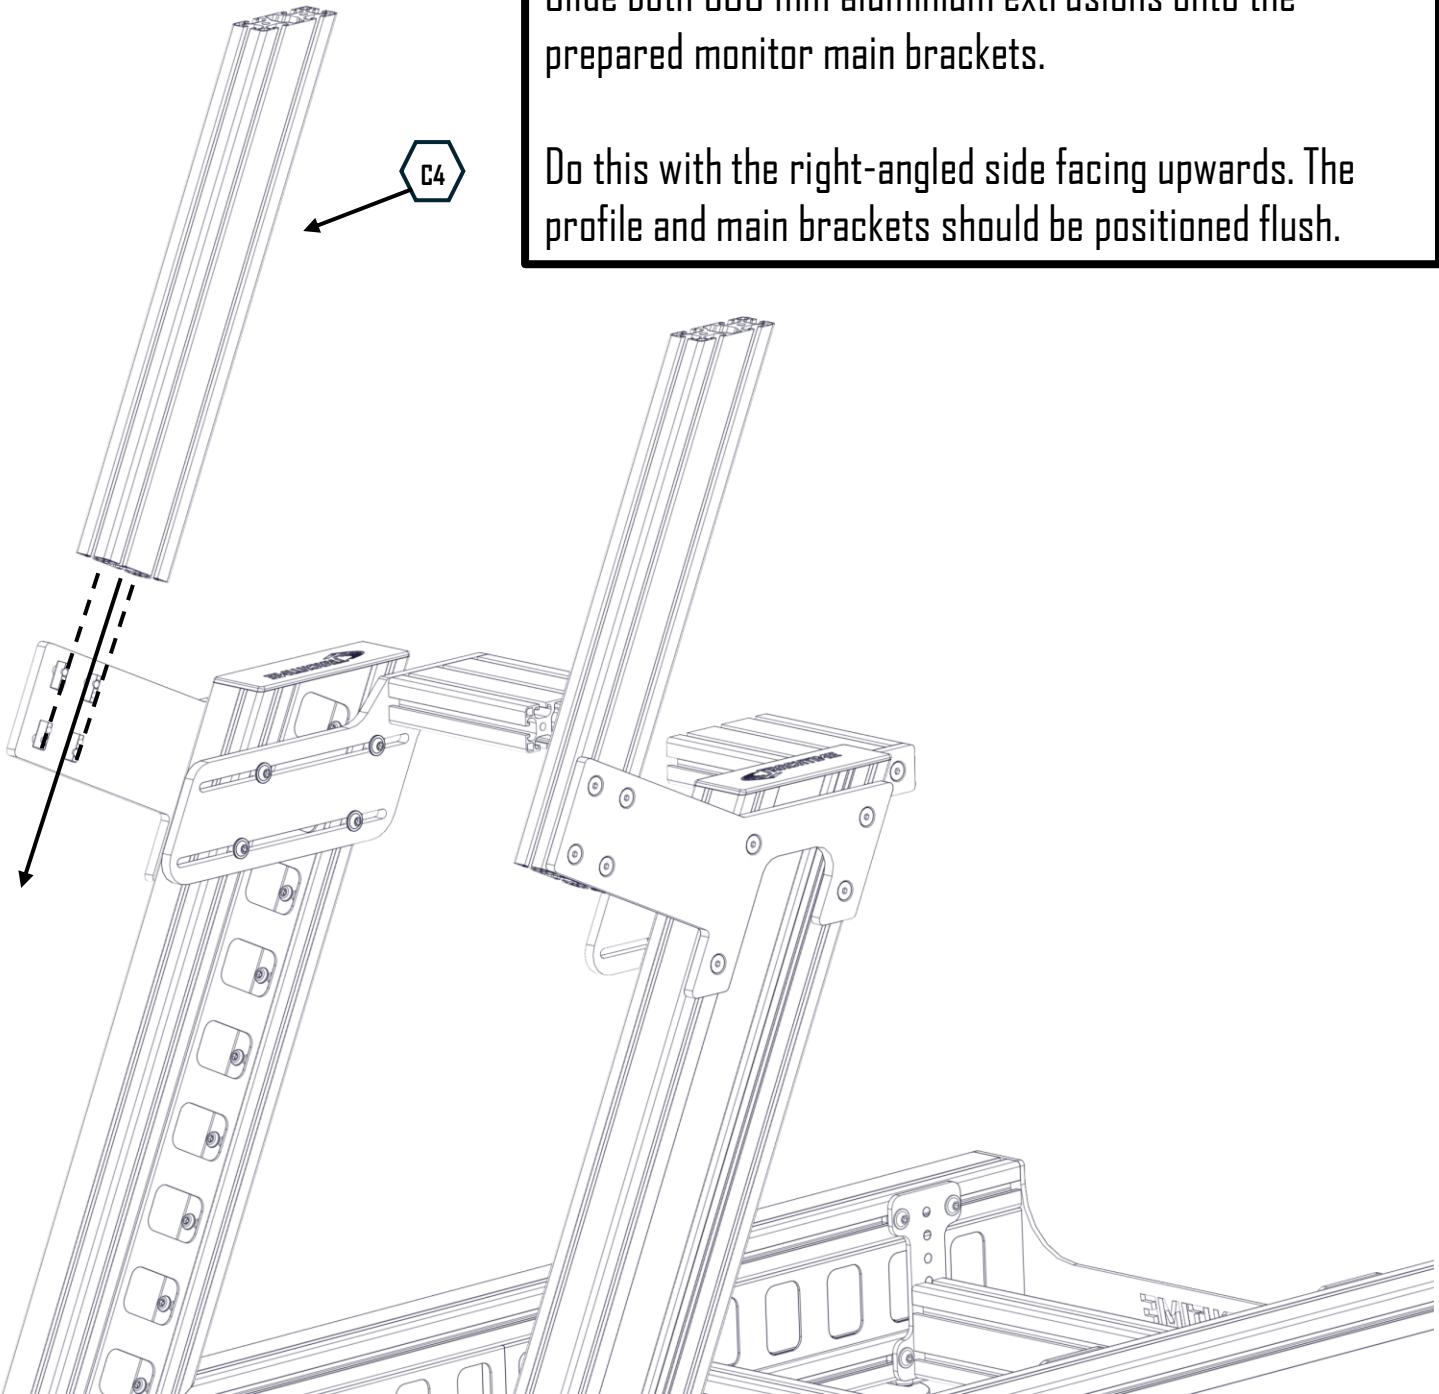


Slide both 500 mm aluminium extrusions onto the prepared monitor main brackets.



Do this with the right-angled side facing upwards. The profile and main brackets should be positioned flush.

8x B9



Insert eight B9 M8 T-Nuts into the extrusion slots (on both outer sides). (On both outer sides).

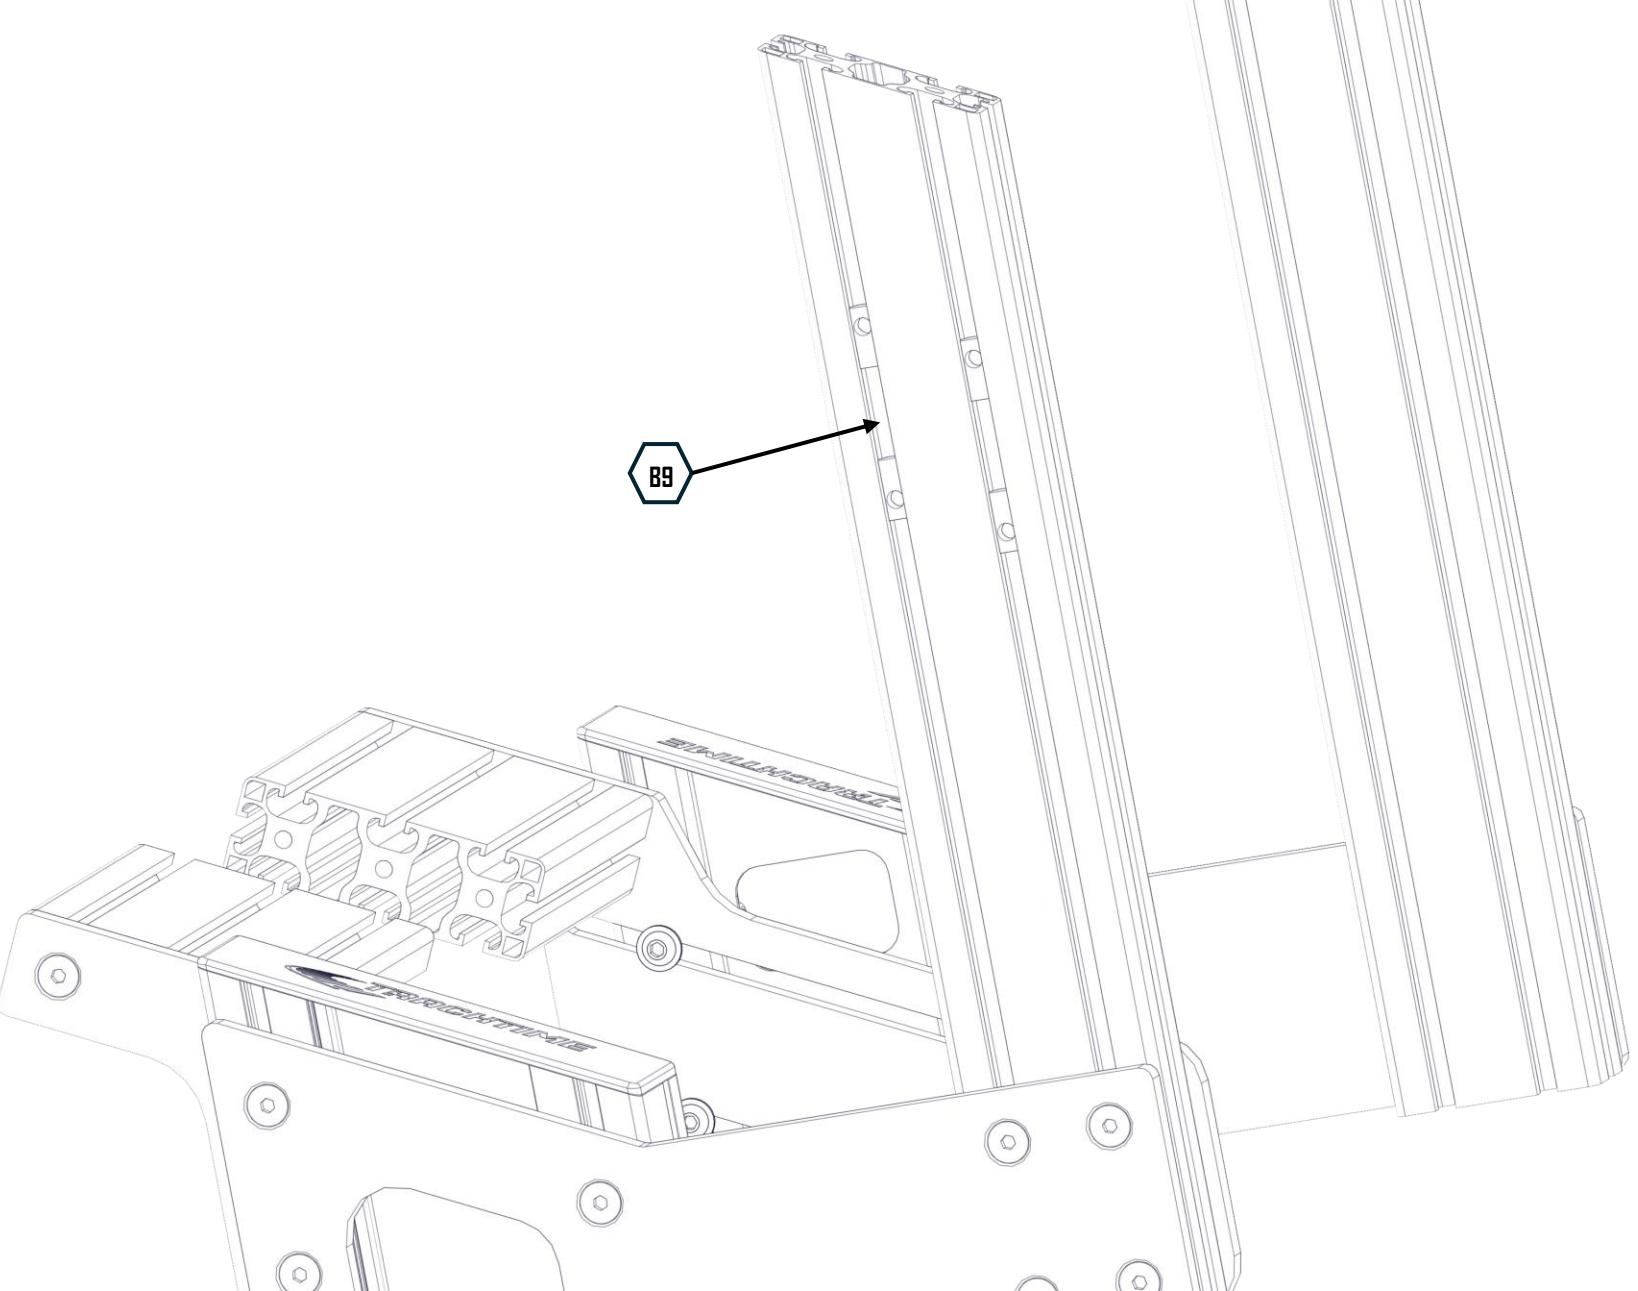

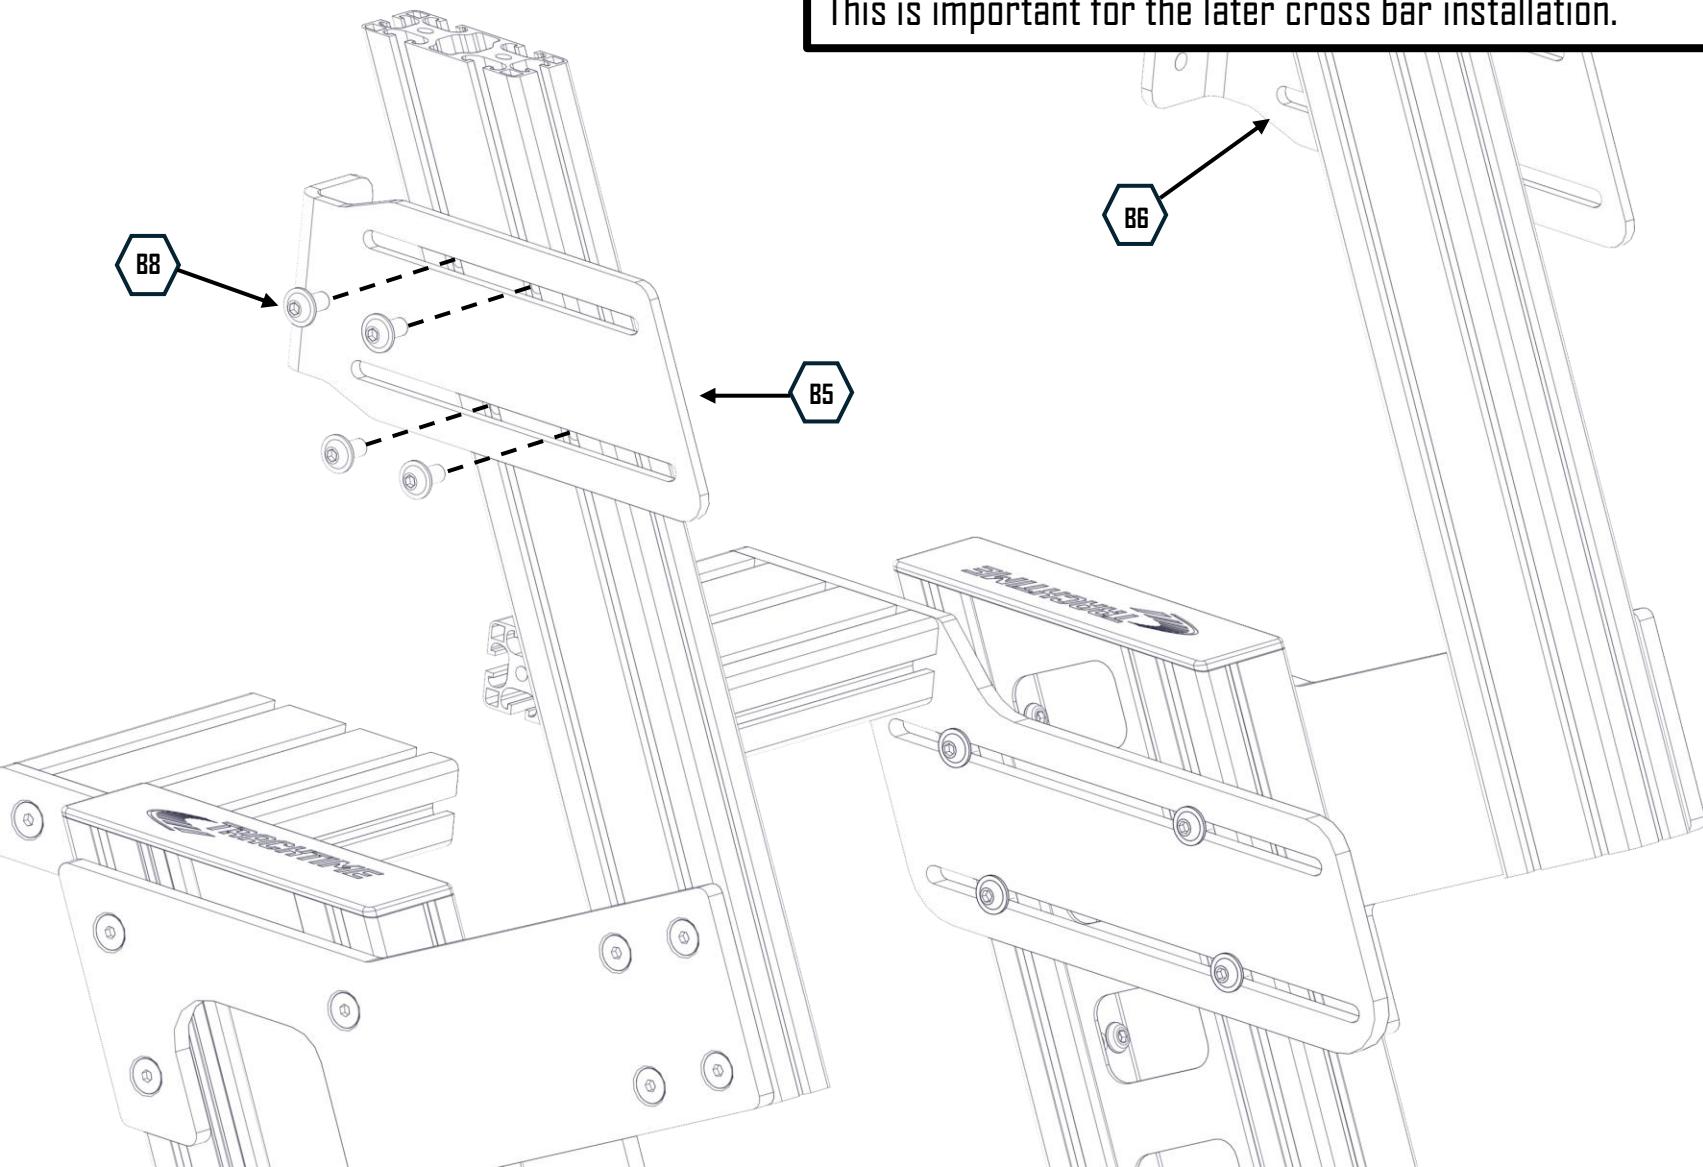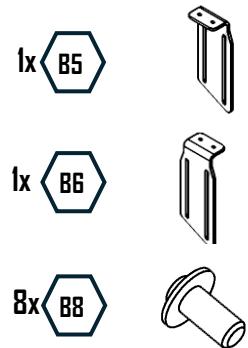


Use the B8 M8x16 screws to mount both monitor slider brackets. Ensure that both sides are perfectly symmetrical.

This is important for the later cross bar installation.




Prepare both brackets (left and right) with B8 M8x16 screws and B9 M8 T-nuts.


Only tighten them by one turn so that they can be slid into place in the next step.

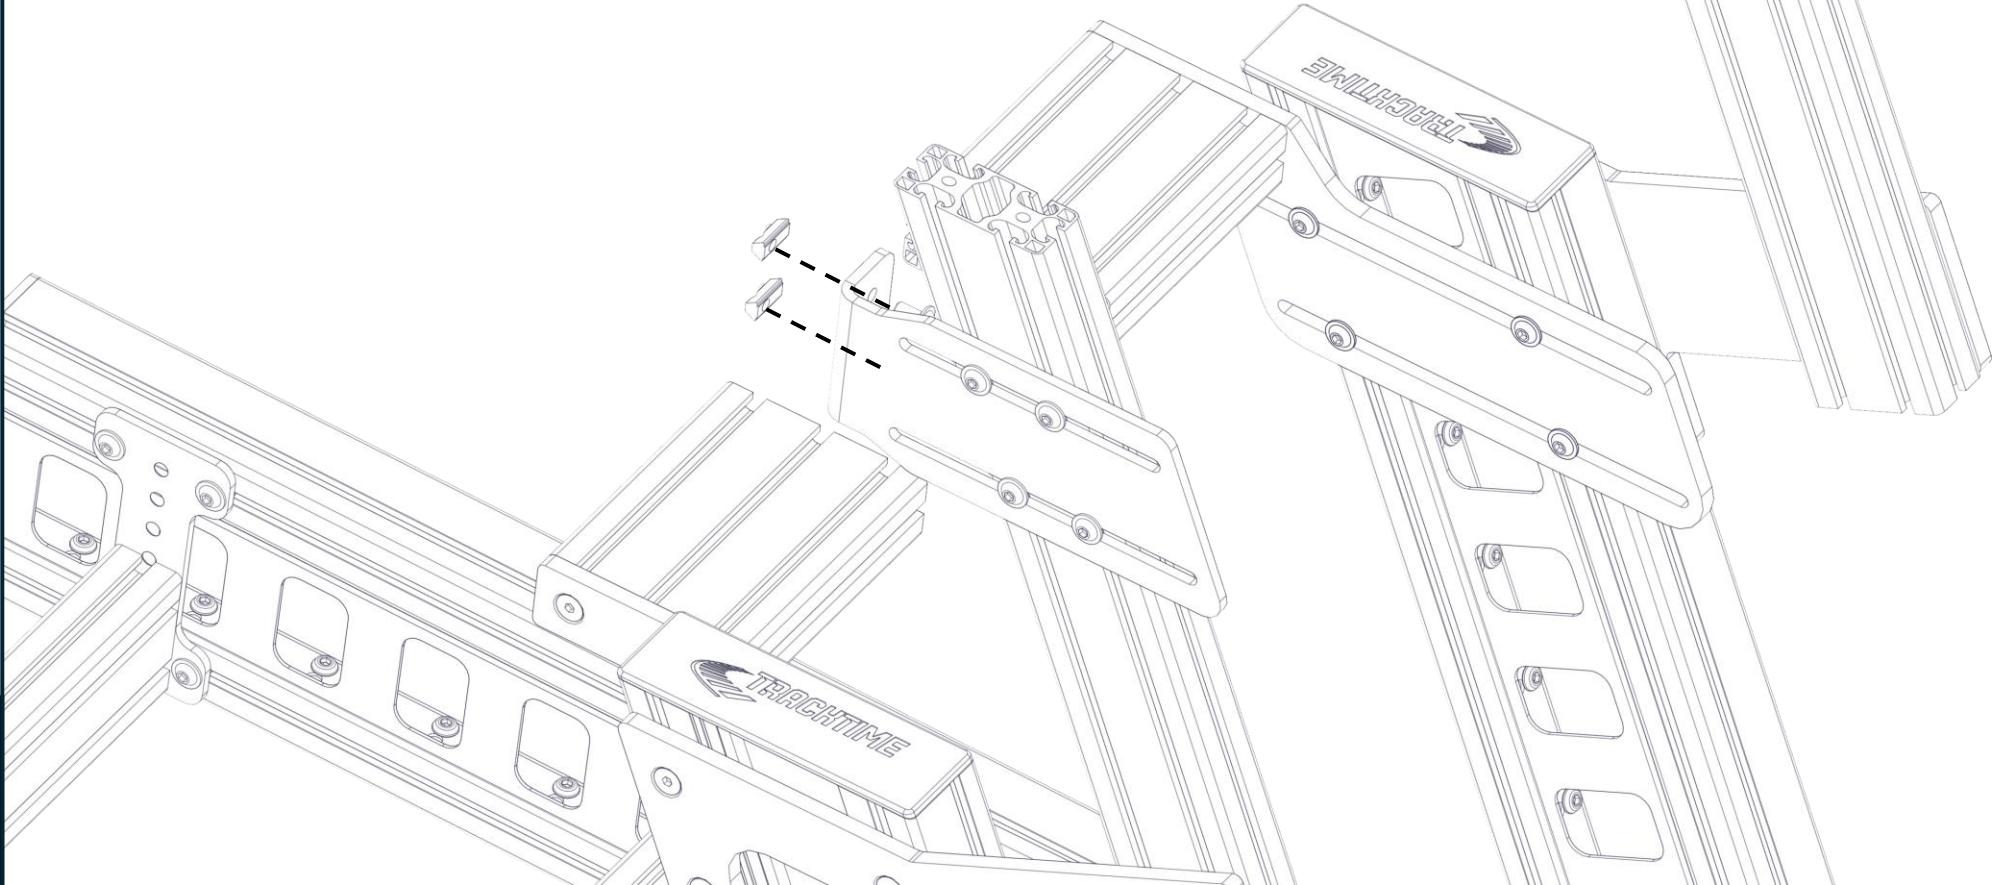

Install the four end caps. Use the angled version for the upper ends and the straight version for the lower ends.

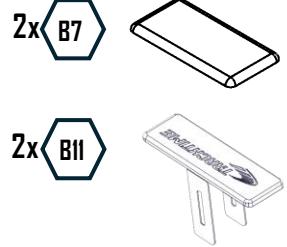

SINGLE SCREEN UNIT

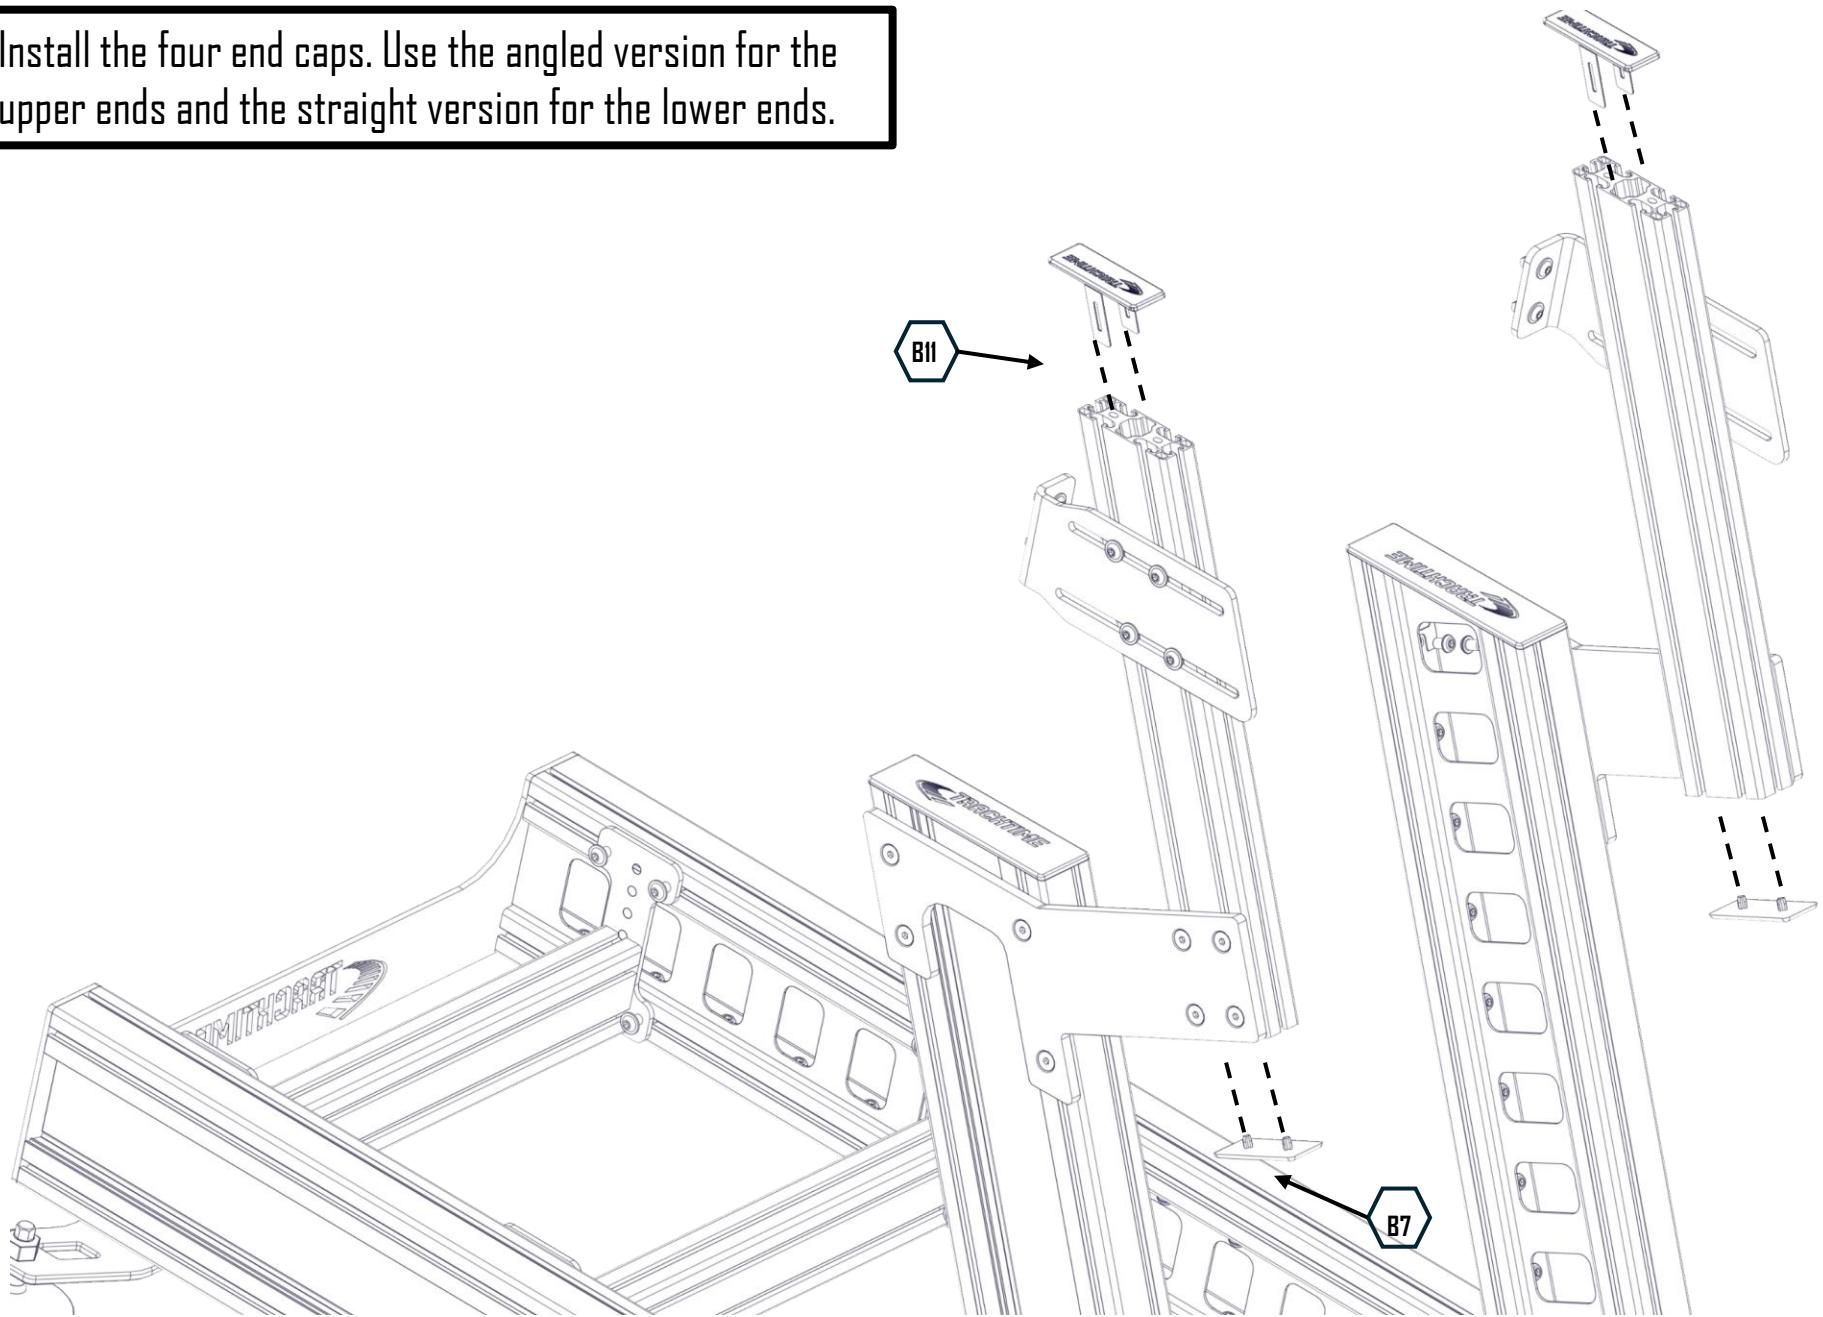


1x B3



SINGLE SCREEN UNIT

Install the aluminium cross bar for the monitor. Slide it onto the T-nuts of both monitor slider brackets. Then fasten all four screws.

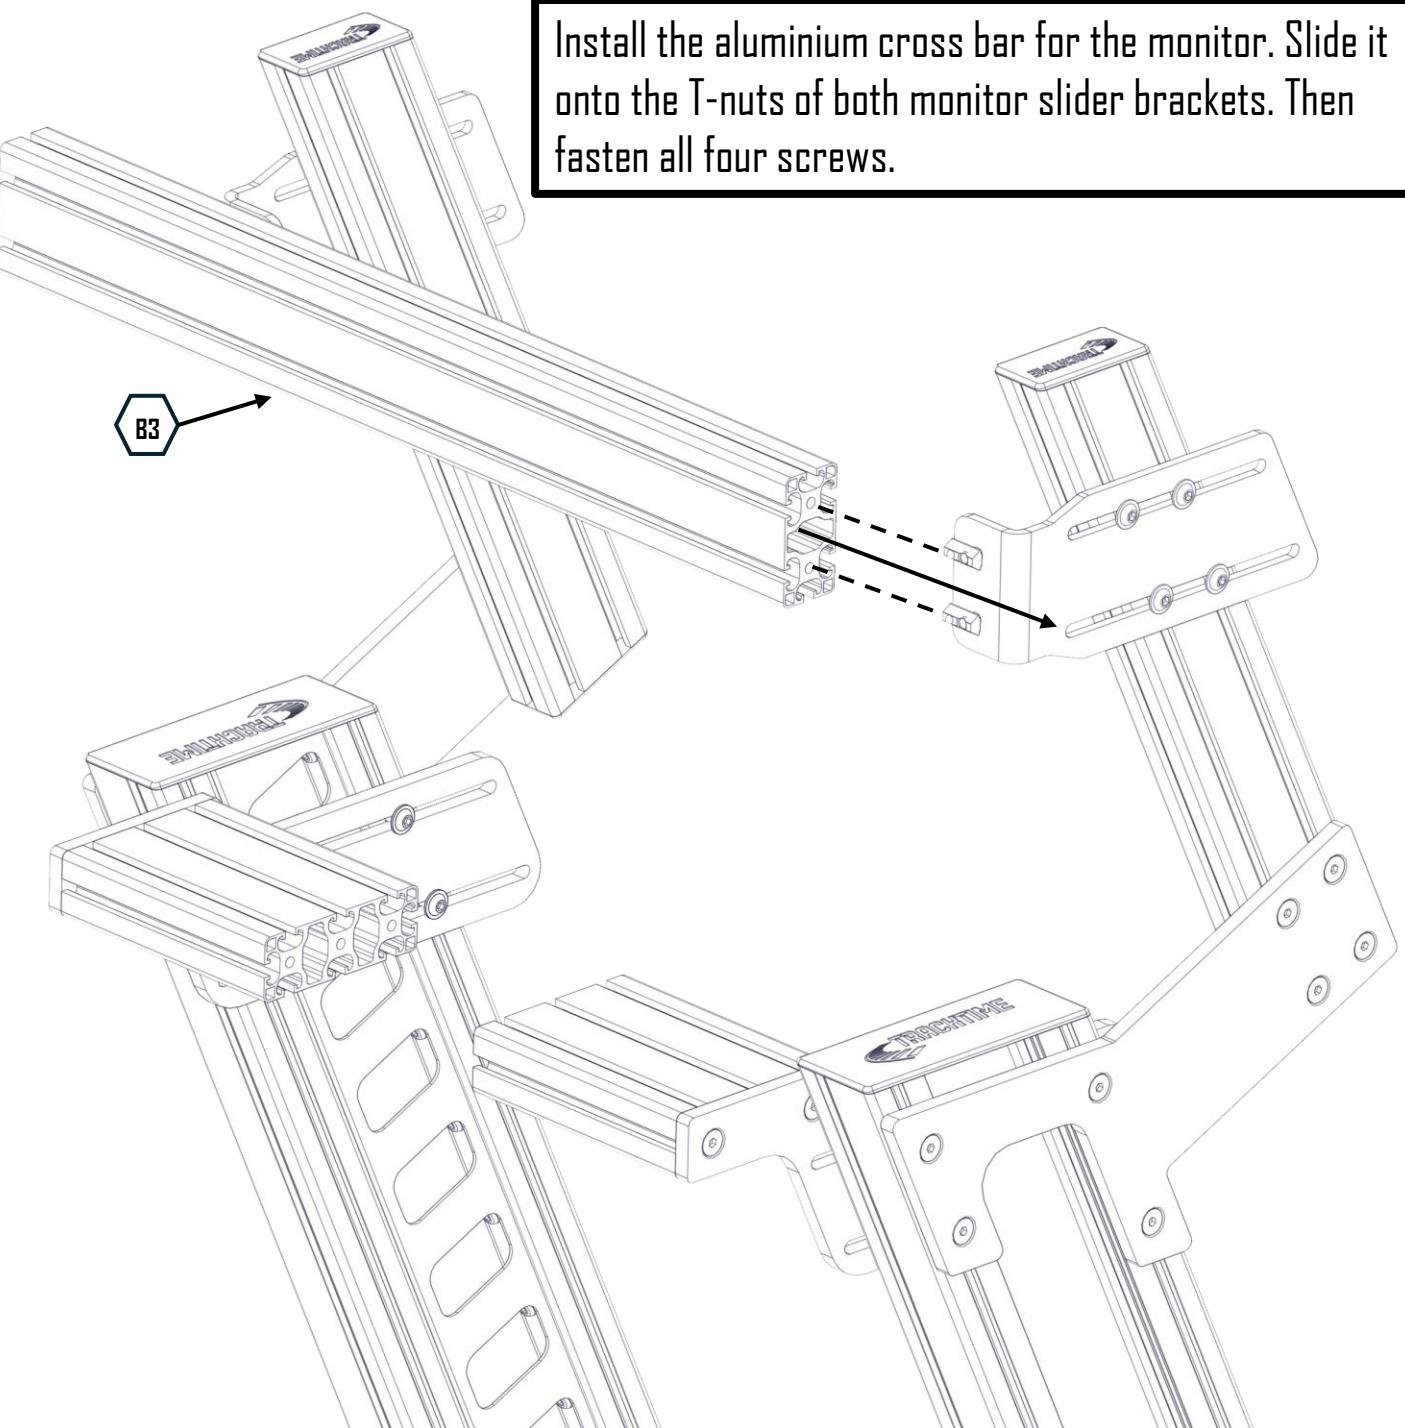



2x B7




SINGLE SCREEN UNIT

Install both end caps.

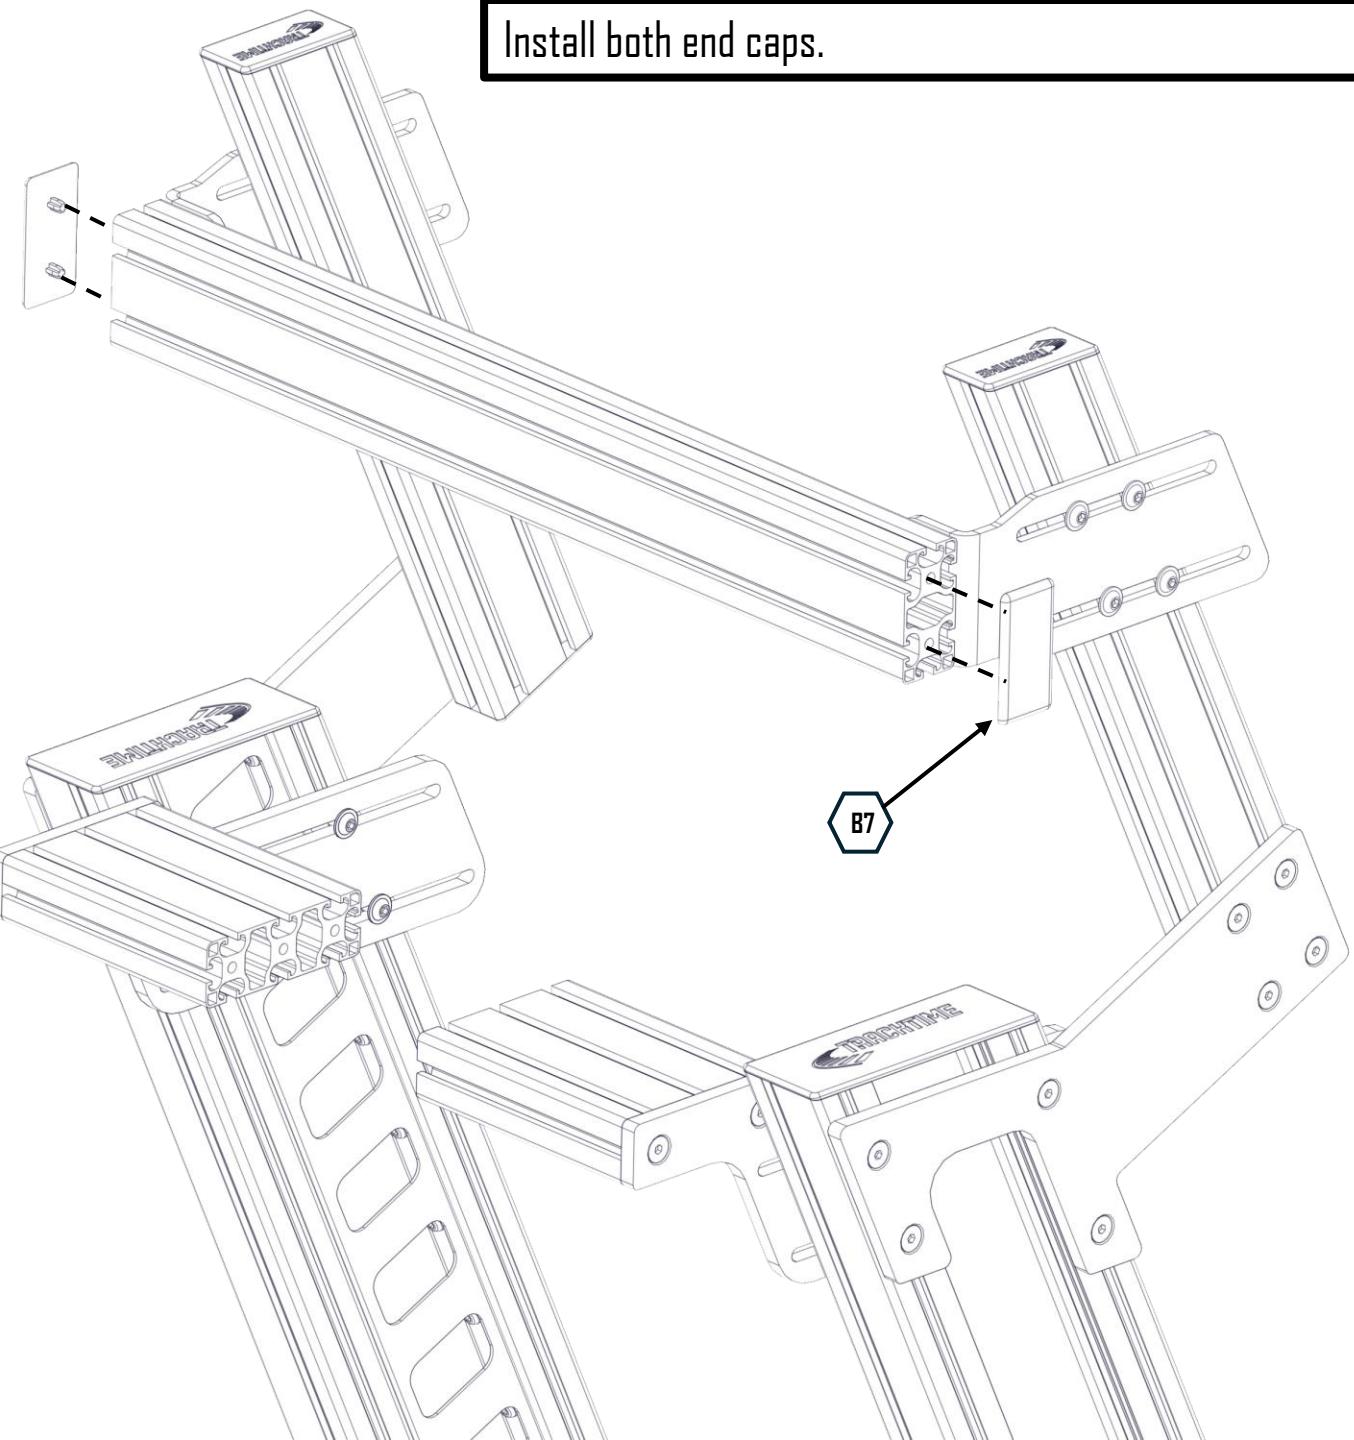

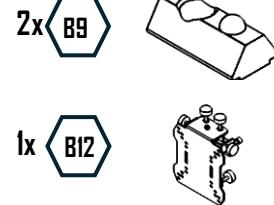

SINGLE SCREEN UNIT

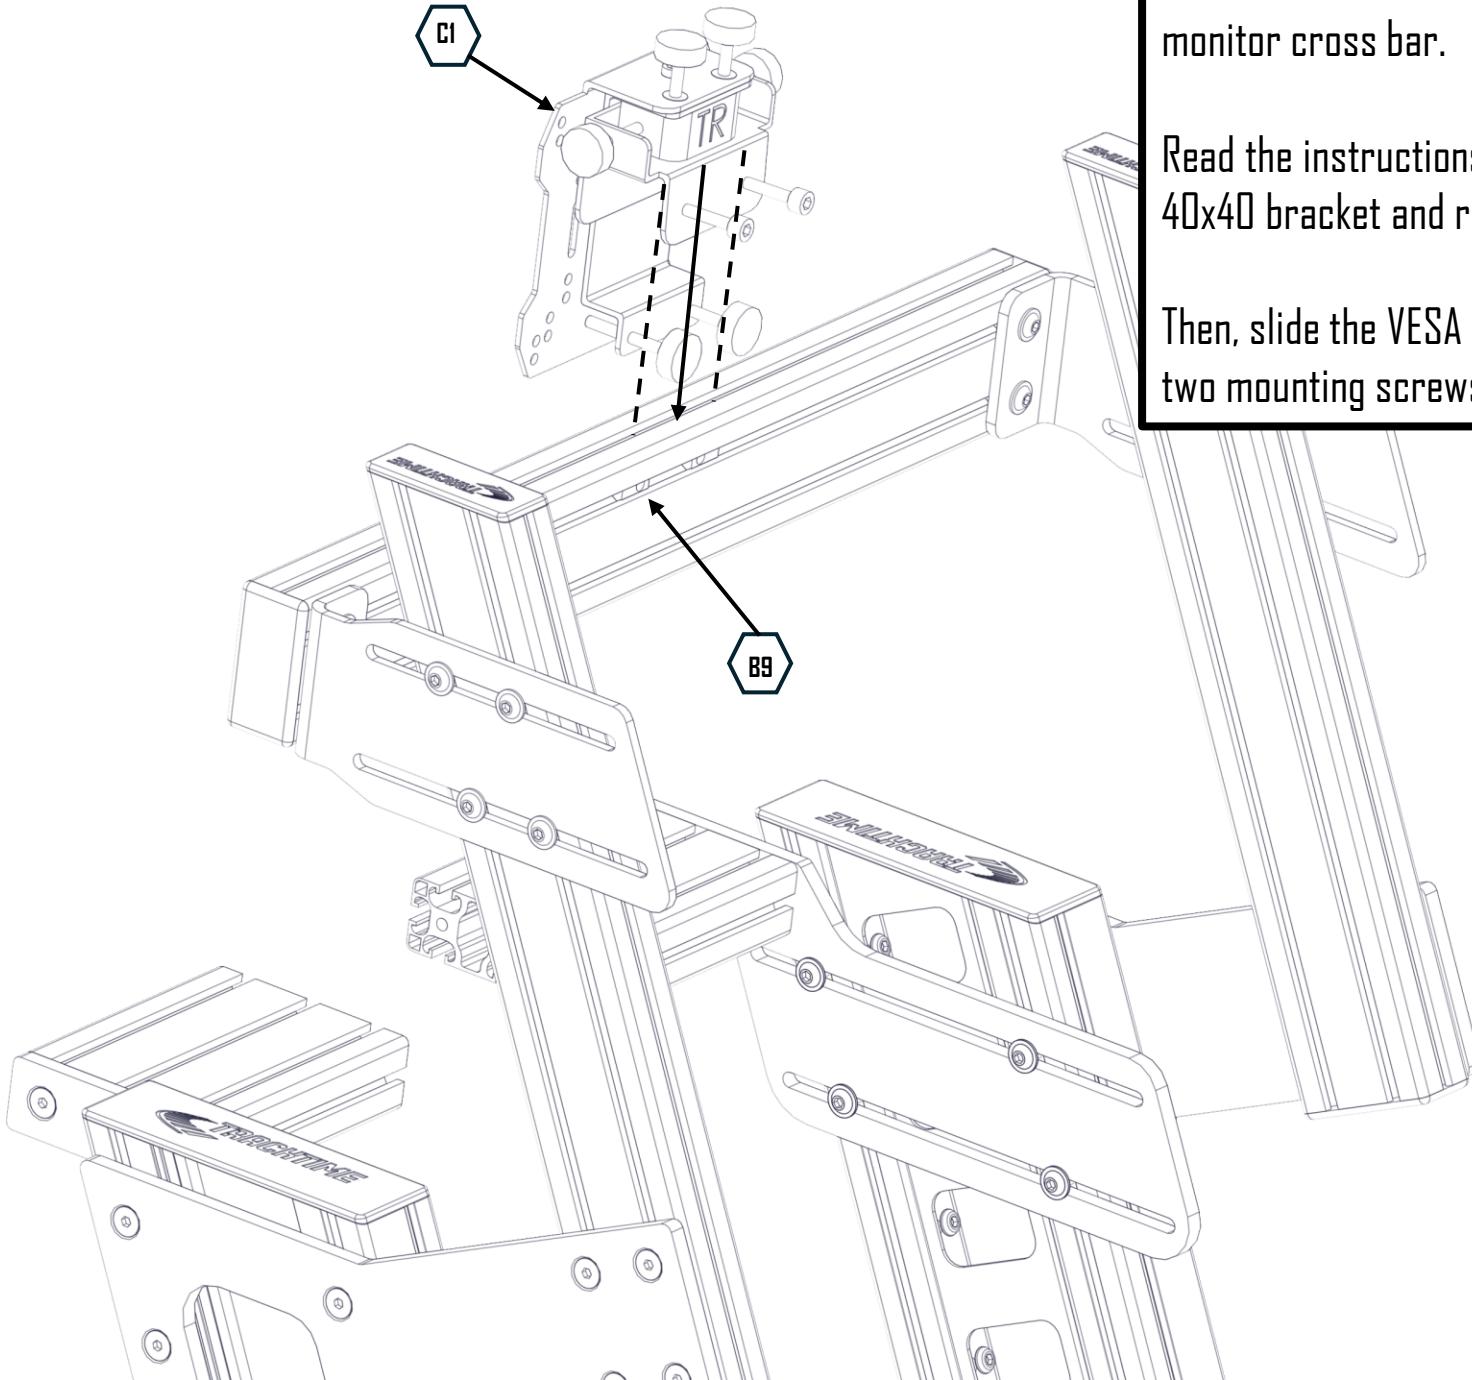


Place two B9 M8-T nuts into the upper back slot of the monitor cross bar.

Read the instructions for the VESA unit, remove the 40x40 bracket and replace it with the 80x40 bracket.




Then, slide the VESA unit onto the crossbar and turn the two mounting screws into the two T-Nuts.

You have finished your single-screen unit!

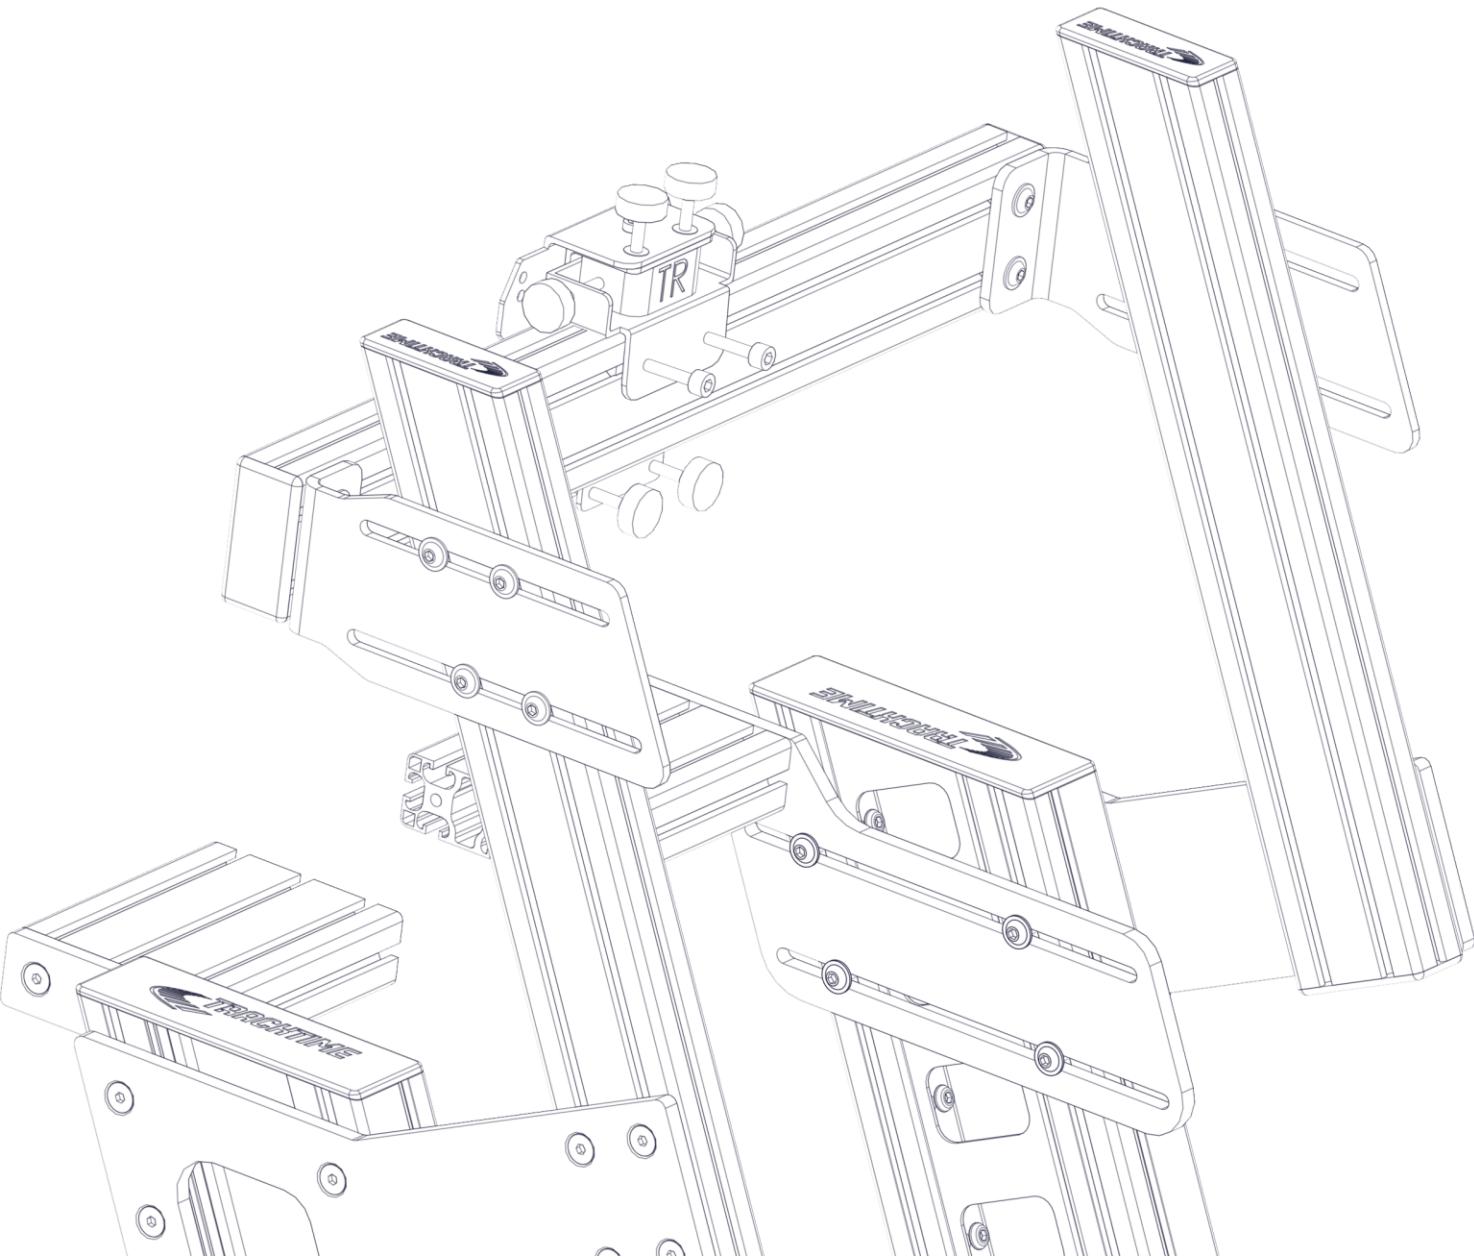

75105652 Single Screen Mount

Part	Picture	Order. No.	Article	Pieces
B1		75121129	Monitormainbracket left	1
B2		75121130	Monitormainbracket right	1
B3		75121131	Monitor Cross Bar Aluminium Extrusion 80x40 640mm	1
B4		75121132	Monitor Up Aluminium Extrusion 80x40 500mm	1
B5		75121127	Monitor Slider Bracket right	2
B6		75121128	Monitor Slider Bracket right	1

Part	Picture	Order. No.	Article	Pieces
B7		75190018	Extrusion Cap 80x40	2
B8		68320084	Lenscrew M8x16	12
B9		75190016	T-Nut M8	30
B10		68320617	Countersunk screw M8x20	16
B11		75130319	Angled Extrusion Cap 80x40	2
B12		76036006	VESA Bracket	1



series / one

Need help? Scan for help & resources



If you have any further questions about assembling this product or about the manual itself, please contact our support department. You can reach them at

info@track-time.de