


# **TRACKTIME**

series / pne

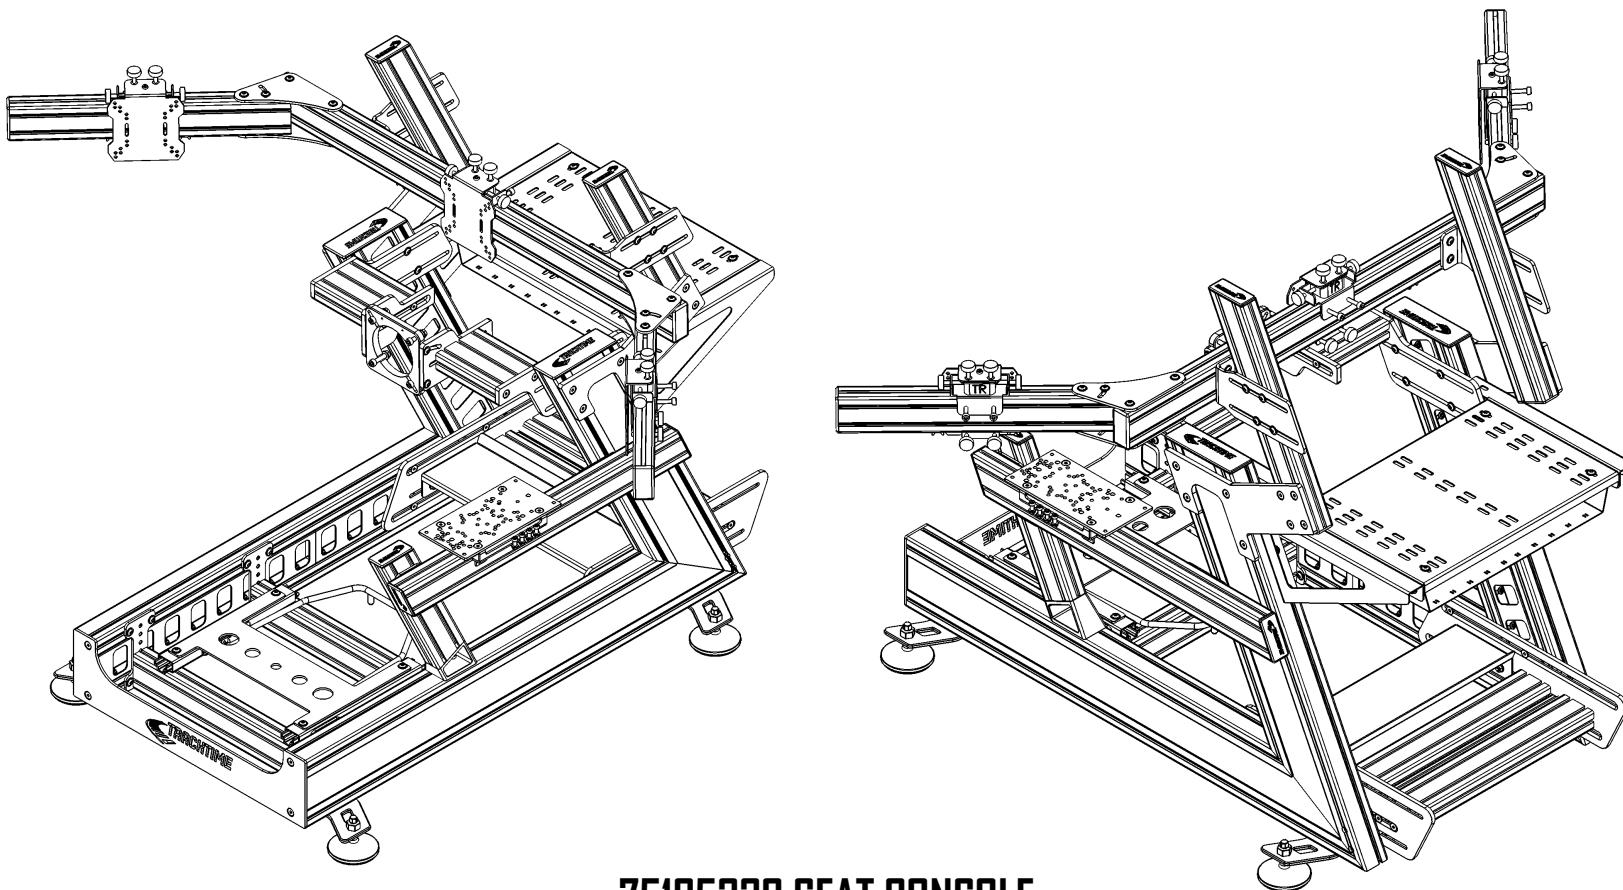

**75105338 SEAT CONSOLE**

Version 1.1

# BEFORE STARTING THE BUILD

The following are needed for assembly:

- Soft base / underlay (scratch protection)
- A set of hex wrenches
- Ratchet with 13mm nut
- Hammer (mallet)
- Tape measure/ruler
- A buddy who can lend a hand

**Read the manual first. All remarks are important and could help you avoid problems.**


Use BOM (Bill of Material) to find the sizes and lengths of the parts.




3 / 5




Install the four T-nuts.

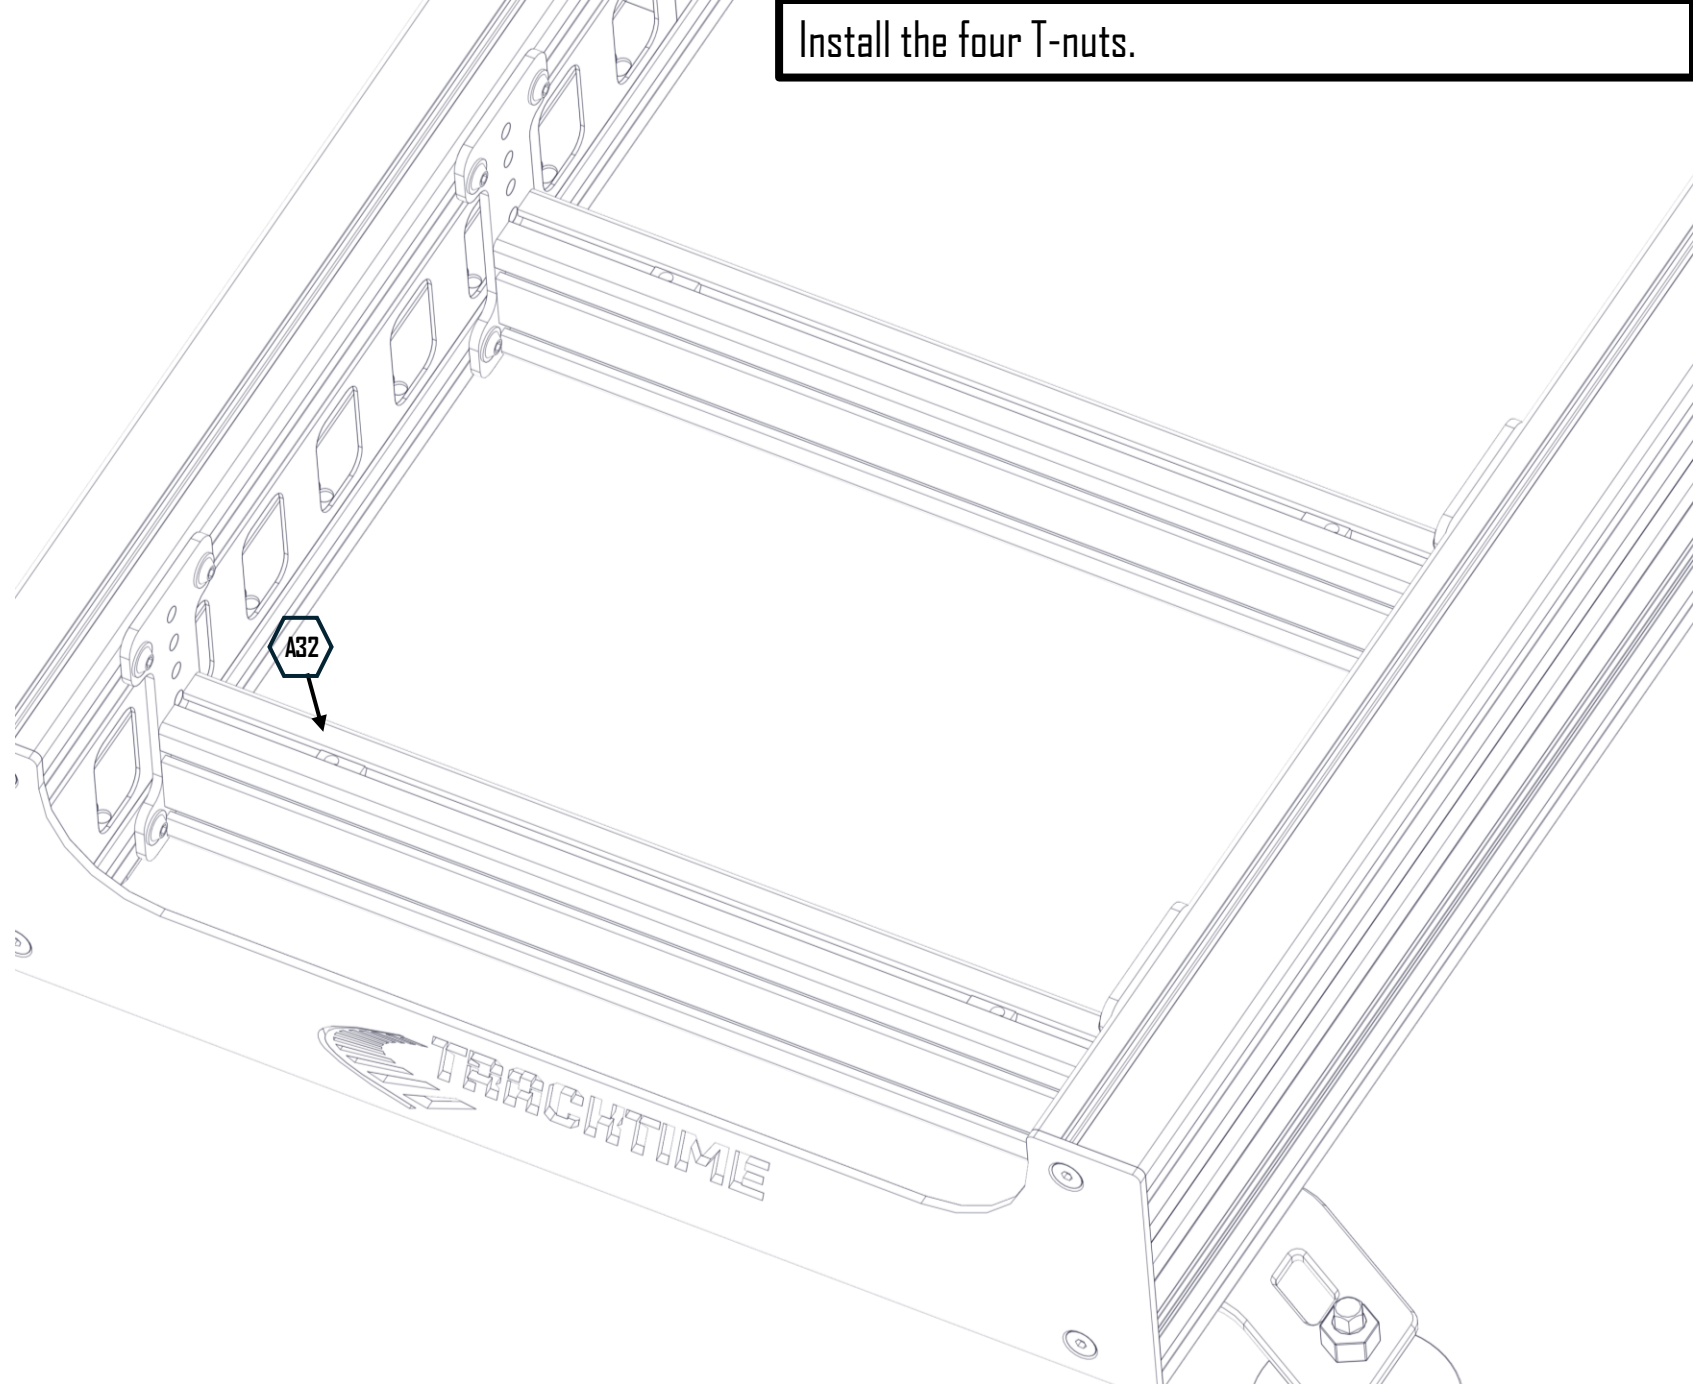




SEATCONSOLE

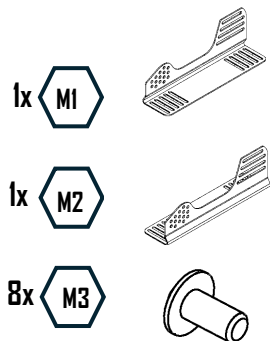


Use the 4x M3 M8 screws to mount the two seat consoles. Do not fasten them completely yet. We will do this once your seat has been mounted using another four M8x20 screws.

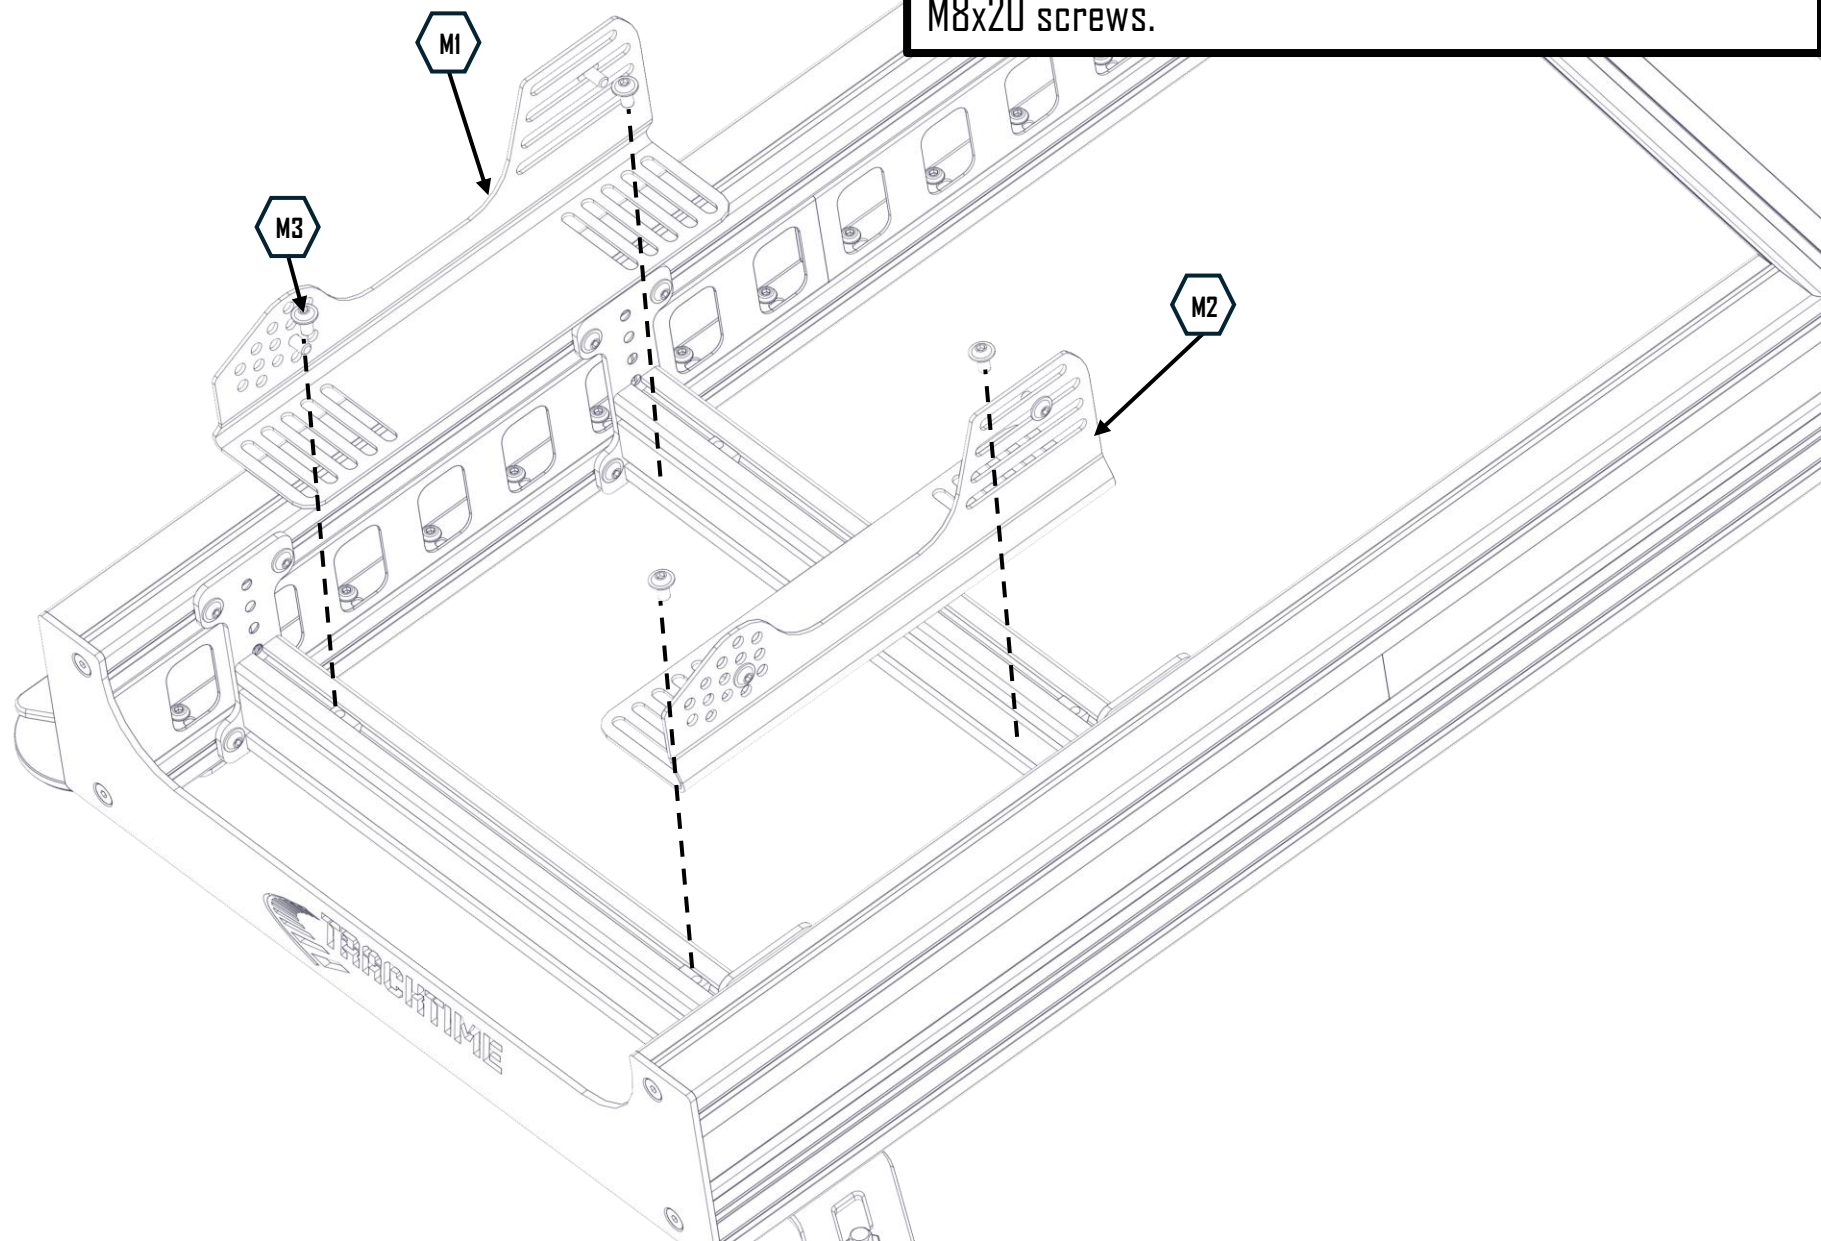

# 75105338 Seat console

Part	Picture	Order. No.	Article	Pieces
M1		75120742	Seat Console Left	1
M2		75120743	Seat Console Right	1
M3		68320244	Lensflatscrew M8x16	8

## Need help? Scan for help & resources

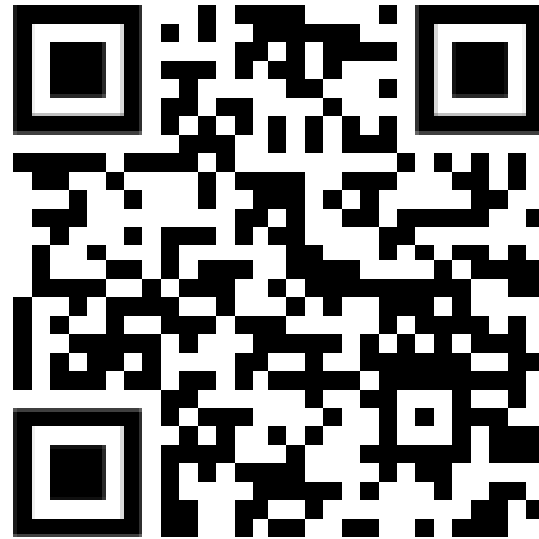

If you have any further questions about assembling this product or about the manual itself, please contact our support department. You can reach them at

[info@track-time.de](mailto:info@track-time.de)